
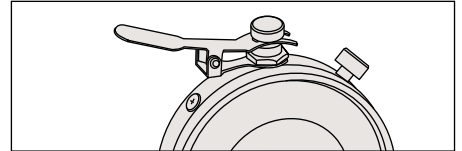


Spindle Lifting Lever and Cable Optional Accessories for Digimatic and Dial Indicators

Spindle Lifting Lever

- The Spindle Lifting Lever is attached to the top end of the spindle for improved inspection efficiency when using a dial indicator mounted on a stand.

Application

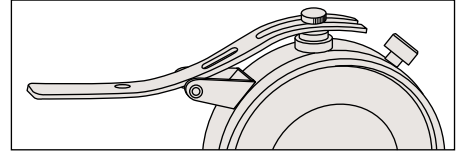

902100

Use for S type Series 1 and F type Series 2 (up to 10mm/.4" range) dial indicators.



21BZA205

Use for F type Series 1 dial indicators.



900527: Lever
101171: Screw

21AZB149

Use for S type Series 2, 3, and 4 dial indicators (up to 10mm/.4").



902011

Use for F type Series 2 dial indicators (up to 10mm/.4" range).



21AZB150

Use for S type Series 2 and 3 dial indicators (from 10mm/.4" up to 20mm/.8").



903424

Use for F type Series 2 dial indicators (up to 20mm/.8" range) and Series 3 and 4 dial indicators (up to 10mm/.4" range).



903307: Lever
192686: Screw

21EZA198

Use for ID-SS, ID-SX, ID-CX



21AZB149: Lever
101171: Screw

* If the spindle lifting lever is installed on a water/dustproof type, waterproof performance is not guaranteed.